

## Installation


- Position the dispenser on a bench capable of supporting the weight, even at full load.
- Allow a minimum clearance of at least 15 cm all around the dispenser so as not to impede the flow of cooling air.
- Connect the dispenser to a single phase network, using an outlet complete with earthing.
- Do not use extension cables.

## Operating procedures

1 Clean and sanitize the unit.

2 Prepare approximately 5 liters of mix following manufacturer's instructions.

3 Open the upper cover. Turn the upper part of the mixing pipe completely anti-clockwise.

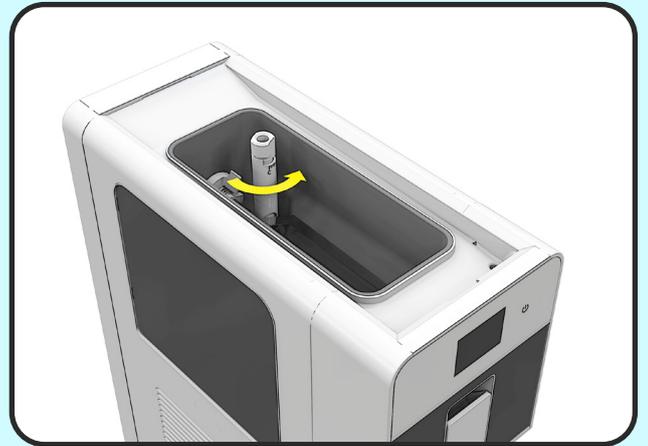


4 Pour the mixture into the upper tank and wait for the cylinder to fill up. This will occur when no more air bubbles exit the hole in the mixing pipe.



5


Turn the upper part of the mixing pipe completely clockwise in order to stop the mixture entering the cylinder.  
Close the upper cover.

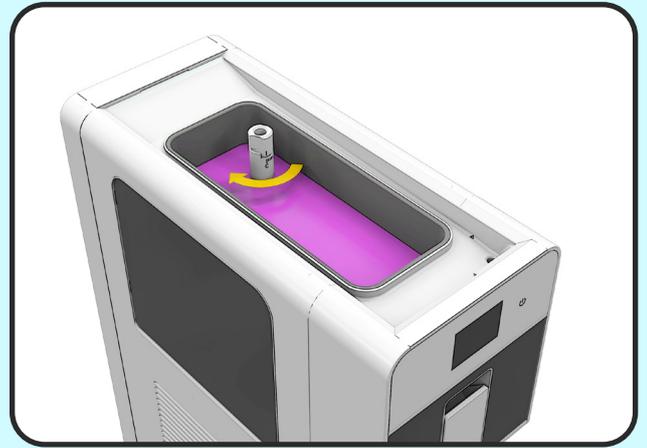

6

Turn the machine ON using the main switch situated underneath the dispenser, on the left-hand side.

To start the unit keep pressed key A.  
Select ice-cream mode pressing icon B.

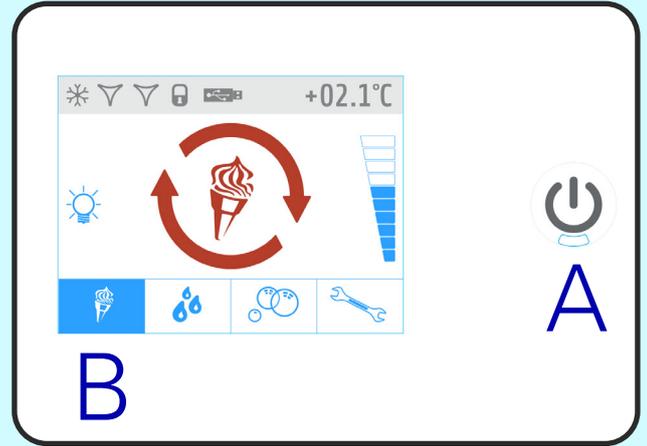

7


Machine will stop automatically when ice-cream is ready.

8

Open the cover and turn the upper part of the mixing pipe anti-clockwise to allow the mixture to enter the lower cylinder.

*The quantity of air in the ice cream can be adjusted, keeping in mind that, starting from the closing position:*

- *minimum rotation corresponds to a softer ice-cream.*
- *complete rotation corresponds to a more compact ice-cream.*

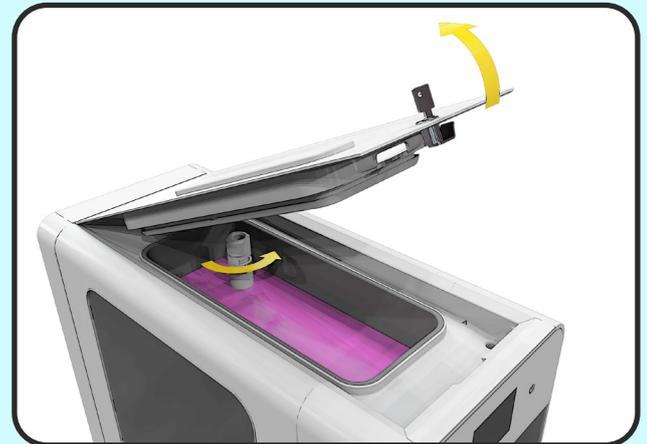

9

Close the cover and let the dispenser operate continuously.